



TAURUS
GX2™

INSTRUCTION MANUAL

GENERAL SAFETY, OPERATING INSTRUCTIONS AND LIMITED WARRANTY

READ CAREFULLY BEFORE USING YOUR FIREARM

Important: Keep this manual with your firearm.

The information contained in this manual is useful, both for beginners and experienced shooters. In addition to important information about the function, cleaning and care of the firearm, this manual contains instructions that will be very helpful in shooting safely.

The most important rule of safe firearm handling is always keep the muzzle pointed in a safe direction!



TAURUS
GX2™

TaurusUSA.com

f/TaurusUSA

X@taurususa

ig/TaurusUSA

- Available in 9mm Luger
- Matte Black Finish
- Single Action Only (Striker Fire)
- Drift adjustable rear sight
- Flat face Target Trigger
- Trigger Safety Blade
- Manual Safety

CONTENTS

Firearm Safety.....	5
Get To Know Your Pistol.....	12
State-By-State Warnings	16
Ammunition	18
Operating Instructions.....	22
Disassembly	26
Assembly	29
Care and Maintenance.....	30
Exploded View	32
Taurus® Service	34



WARNING

The safety warnings in this booklet are important. By understanding the dangers inherent in the use of any firearm, and by taking the precautions described herein, you can safely enjoy your Taurus® firearm. Failure to follow any of these warnings can result in serious injury to you or others, as well as severe damage to the firearm or other property.

NOTES

SIGNAL WORDS AS DEFINED BY
ANSI Z535.6 AND Z535.4 STANDARDS.

 DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE	NOTICE is used to address practices not related to physical injury.

FIREARM SAFETY

 **DANGER**

When a firearm discharges, the bullet or shot can strike a person, resulting in death or serious bodily injury.

The three basic keys to safe handling of firearms:

- 1. KEEP THE MUZZLE POINTED IN A SAFE DIRECTION.** Even if the firearm discharges, if the muzzle is pointed in a safe direction, no one will be injured.
- 2. KEEP YOUR FINGER OFF THE TRIGGER UNTIL YOU ARE READY TO FIRE.** If you maintain good trigger discipline, it is extremely unlikely the firearm will fire.
- 3. NEVER TRUST ANY SAFETY MECHANISM.** If you adopt the attitude that you will not trust any safety mechanism, you will be vigilant about keeping your finger off the trigger and keeping the muzzle pointed in a safe direction.

 **WARNING - KNOW YOUR TARGET**

Never fire at targets at close range. Ricochets can and do cause death or serious bodily injury. What constitutes "close range" depends on many factors including target material, bullet caliber and angle of impact.

KNOW WHAT IS BEHIND YOUR TARGET. Unless you are shooting into a bullet trap designed to capture the type of ammunition you are firing, projectiles may pass through the target and strike anyone or anything beyond. Bullets can travel miles.

ALWAYS WEAR HEARING PROTECTION. Firearms are loud. The sound they generate is greater indoors. Repeated exposure to loud noises can cause deafness. Hearing protection is rated by decibel reduction. Look for “dB” reduction of 30 or more when purchasing ear protection. Modern ear protection can allow normal hearing until the sound from the discharge reaches the ear. By layering hearing protection, for example, wearing 30db rated foam plugs with 20db rated ear muffs, significant protection can be achieved.

ALWAYS WEAR EYE PROTECTION. In normal operation, firearms emit hot high-velocity gases, particles and metal. These materials flying into your eye can cause blindness. Protect your vision with proper eye protection. Any eye protection may be better than none, but look for ANSI Z87.1-2003 certified eyewear for the best protection.

NEVER HANDLE FIREARMS WHILE UNDER THE INFLUENCE OF DRUGS OR ALCOHOL. Firearms are dangerous. Handling firearms while impaired by drugs or alcohol is foolhardy and can result in serious injury or death. This warning includes prescription drugs that contain a warning about using machinery or driving while taking the medication.

MODIFIED FIREARMS ARE DANGEROUS, AND USE CAN RESULT IN SERIOUS INJURY OR DEATH. “Trigger jobs,” polishing original components or installing aftermarket parts can cause a firearm to function in ways different than intended. Some such work may also be illegal.

DAMAGED FIREARMS ARE DANGEROUS, AND USE CAN RESULT IN SERIOUS INJURY OR DEATH. Repairs should always be made by a qualified gunsmith or by a factory-authorized repair site. Work done by those unfamiliar with the design can cause a firearm to function in ways different than intended.

NEVER ATTEMPT TO DISASSEMBLE OR CLEAN A LOADED FIREARM. DOING SO CAN RESULT IN SERIOUS BODILY INJURY OR DEATH. How often have we heard “But it went off while I was cleaning it!” or, “I did not know it was loaded!” or, “It was jammed, and I tried to take it apart!”?

IF A FIREARM GOES OFF, THERE WAS A ROUND OF AMMUNITION IN THE CHAMBER. Period. “Clear” (or empty) the firearm of all ammunition before disassembling or cleaning.

As owner of your new Taurus® firearm, you are responsible for (1) keeping your finger off the trigger, (2) pointing the muzzle in a safe direction, (3) removing the magazine, (4) pulling the slide to the rear and locking it back, and (5) looking and feeling in the magazine well and chamber to confirm the pistol is empty. An empty firearm cannot fire.

FIREARM SAFETY SYSTEMS

Firearm safety is supported by a system. With your pistol, the system is made up of the following:

1. You! Your involvement in safety cannot be overemphasized. No safety component can keep your finger off the trigger and the muzzle pointed in a safe direction. Also, you are the key to never trusting any of the mechanical parts of the safety system.

2. Indexing Pad/(RMP). It is important to keep your finger off the trigger until you are ready to press the trigger and fire the pistol. If you keep your finger off the trigger you will not press it by accident and fire the pistol before you are ready to do so, thereby avoiding accidents. The indexing pad/(RMP) gives you a consistent place to put your trigger finger off the trigger, but in a ready position.

3. Trigger Safety. The trigger safety’s purpose is to prevent the trigger mechanism from being actuated in the event the firearm was accidentally dropped. Once you are ready to fire, the trigger safety will move automatically in the fire position as you press the trigger.

4. Manual Safety. Always use the manual safety. The manual safety is designed to prevent the gun from being fired by blocking the trigger mechanism. See pictures below that illustrate the safety position. When you do engage the safety, it needs to be all the way in the Safe position, not half way or at some other point in its travel. Do not play with the manual safety and you will avoid accidents.



Firing Position

Safety Position





WARNING

The rules of safe firearm handling must be followed, even with the manual safety activated.

5. Firing Pin Block. The firing pin block's purpose is to prevent the gun from firing in the event the firearm was accidentally dropped. The firing pin block interferes with the forward travel of the firing pin until the trigger is pulled. Once you are ready to fire, pressing the trigger moves this safety component from its "safe" (blocking) position to its "fire" (free) position.

6. Trigger Guard. This is a physical obstruction that helps prevent unintended pressing of the trigger or trigger safety. Do not modify the trigger guard.

7. This Manual. Taurus intends for you to use this manual to learn about your pistol and to help you use your pistol safely. If you use the manual, you will be a long way toward being a knowledgeable and safe firearms owner.

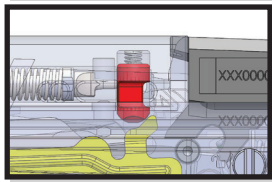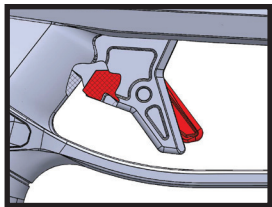

PISTOL AND REVOLVER SIZE AND SAFETY

The selection of a revolver versus a pistol as well as the size, caliber and magazine capacity of a handgun are personal choices. There are many choices to be made, and there are advantages and disadvantages for each. When selecting a pistol, size has safety implications because of the way pistols are loaded.

Generally speaking, smaller handguns may require more attention to be handled safely than medium or full-size handguns. This is because their small size makes it easier to point the muzzle at your hand or to "sweep" (swing the muzzle across your body) yourself in ordinary handling.

When chambering a round, we recommend pulling the slide to the rear by gripping the rear of the slide, with the muzzle pointed straight and away from your body and in a safe direction.

SAFE CARRY CONDITION

"Safe Carry Condition" is the most ready-to-fire condition that the user feels is reasonable under the circumstances. Generally, we believe that Taurus® pistols should be carried with a full magazine and an empty chamber. Under most circumstances, this provides the best balance of readiness and safety. On the plus side, if the chamber is empty, unintended discharges are minimized. However, the slide must be manipulated to load a round in the chamber. In emergency circumstances, this can be difficult to do safely and correctly.

If the user believes that he or she is faced with an increased threat, chambering a round is appropriate. For safety reasons, this should be done beforehand with the muzzle pointed in a safe direction, your finger off the trigger and on the indexing pad/(RMP). If equipped, place the manual safety in the "safe" position. How do you know you may be going into a more dangerous situation? That depends. If, for example, you carry cash to deposit after a business closing, this may well qualify. If a domestic partner is actively threatening you, this may qualify as well.

"Safe Carry Condition" is a judgment call and must be made by the user. Some users routinely face greater threats than others. Users must be aware of their situation and circumstances. Errors in judgment can have dire and tragic outcomes if firearms are present.

CARRYING FIREARMS

Carrying a firearm can be dangerous. Carrying a firearm makes it more difficult to control the muzzle and makes it more likely that the firearm can be dropped or bumped causing the firearm to fire.

In almost all circumstances, it is safest to carry a handgun in a holster designed for that specific handgun. Carrying a handgun in a pocket without a specific designed In-Pocket Holster or a trigger shield or in a waist band without a belt clip is always a last choice. Carrying any handgun in a holster that fits the firearm and style of carry should prevent it from accidentally falling and you from losing control of the muzzle.

Except in rare high-threat circumstances, carry your pistol with a full magazine and an empty chamber. If the chamber is empty, the pistol cannot fire.



WARNING - CARRYING

Do not carry your firearm in any way that might let it fall or be bumped. If a firearm falls or is bumped, it may fire.



WARNING - CARRYING

Always review and follow the holster or luggage manufacturer's instructions or the firearm may fall or be bumped and fire.

FIREARM STORAGE AND GUN LOCKS

How you secure your firearm is a personal choice based on the unique circumstances in your home, business or vehicle and the laws of the state where your firearm is located. Any choice you make about securing your firearm will present advantages and disadvantages. You must weigh those advantages and disadvantages and choose which security method is best for you and those around you.



WARNING - LOCKING

Never lock a firearm with a round of ammunition in the chamber. Unlocking a loaded firearm makes it more difficult to maintain trigger discipline and to keep the muzzle pointed in a safe direction.



WARNING

Securing your firearm may inhibit access in a defensive situation and may result in injury or death.



WARNING

Failure to secure a firearm may result in injury or death. Properly securing a firearm means storing your firearm unloaded, decocked and securely locked, with all ammunition in a separate location.

GET TO KNOW YOUR PISTOL



SPECIFICATIONS

Model	Taurus GX2 CA
Caliber	9mm Luger*
Action	Single action only
Capacity	10 rounds
Barrel Length	3.38"
Overall Length	6.14"
Overall Height	4.89"
Overall Width	1.18"
Weight	20.6 oz.
Sights	Drift Adjustable Rear Sight
Materials	Frame: Stainless Steel Alloy Slide: Alloy Steel Barrel: Stainless Steel Grip: Polymer
Safety Devices	Firing pin block, Trigger safety, Visual loaded chamber indicator
Finish	Matte black and matte stainless steel
Remarks	Reversible magazine release, Magazine disconnecter

NOTICE

*9mm Luger is a cartridge caliber also commonly known as: 9mm / 9x19 / 9x19mm / 9mm Parabellum / 9mm Para

LOCKING DEVICE INSTALLATION INSTRUCTIONS



WARNING - LOCKING DEVICES

- Always keep your firearm pointed in a safe direction, including when you are installing or removing your locking device.
- Always verify that your firearm is completely unloaded (see page 26) before installing your locking device.
- Do not install locking devices in the trigger guard; always keep your fingers and locking device outside the trigger guard during device installation and removal.
- Store firearms, ammunition and keys separately and securely, away from children and careless adults; do not store your firearm with the keys in the locking device.
- Do not attempt to work the action of your firearm with the locking device in place; this may damage your firearm.
- While locking devices are an important aid to security measures, they are not a substitute for safe firearm handling and proper storage. Remember that any mechanical device can be bypassed with enough time, knowledge, determination and equipment.

LOCKING DEVICES MUST BE USED SAFELY AND RESPONSIBLY

It is important to use the locking device on your Taurus® firearm!

Keep the muzzle pointed in a safe direction and your fingers outside the trigger guard at all times during installation of the locking device!

To Install the Factory-Supplied Locking Device:

1. Remove the magazine from your pistol.
2. Open the action completely, and verify that the firearm is completely unloaded and contains no cartridges or cartridge cases! Use the slide catch to keep the action open during installation of the locking device.
3. Insert the cable directly in your pistol as shown in Figure 1.
4. To lock: With the key turned to the farthest clockwise position, insert the loose end of the cable into the lock. Turn the key counterclockwise and remove the key.
5. Once the lock is securely closed, pull firmly on the lock to test the connection and be sure it is locked. Do not leave or store your firearm with the key in the lock! Store your locked, unloaded firearm and the key in secure, separate locations, away from ammunition, children, and unauthorized adults.



WARNING

Never leave your keys in the lock when the lock is installed on the firearm.

STATE-BY-STATE WARNINGS

Certain states require by law their own specified warning notices. Taurus International Manufacturing, Inc. sells its products in compliance with all applicable laws and regulations. Because our products may be sold in these states, we include the following:

CALIFORNIA

 **WARNING**

Firearms must be handled responsibly and securely stored to prevent access by children and other unauthorized users. California has strict laws pertaining to firearms, and you may be fined or imprisoned if you fail to comply with them. Visit the website of the California Attorney General at <https://oag.ca.gov/firearms> for information on firearm laws applicable to you and how you can comply. Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison. If you or someone you know is contemplating suicide, please call the national suicide prevention lifeline at 1-800-273-TALK (8255).

 **ADVERTENCIA**

Las armas de fuego deben manipularse de manera responsable y segura para evitar el acceso de niños y otros usuarios no autorizados. California tiene leyes estrictas relacionadas con armas de fuego, y usted puede ser multado o encarcelado si no las cumple. Visite el sitio web del Procurador General de California en <https://oag.ca.gov/firearms> para obtener información sobre las leyes de armas de fuego que le son aplicables y cómo puede cumplirlas. A los niños los atraen las armas de fuego y las pueden hacer funcionar. Ellos pueden causarse lesiones graves y la muerte. Evite que los niños tengan acceso a las armas de fuego guardándolas siempre con llave y descargadas cuando no las esté utilizando. Si usted tiene un arma de fuego cargada en un lugar en que un niño tiene acceso a ella y la usa indebidamente, le pueden dar una multa o enviarlo a la cárcel. Si usted o alguien que conoce está pensando en suicidarse, llame a la línea nacional de prevención del suicidio al 1-800-273-TALK (8255).

MASSACHUSETTS

 **WARNING FROM THE MASSACHUSETTS ATTORNEY GENERAL**

This handgun is not equipped with a device that fully blocks use by unauthorized users. More than 200,000 firearms like this one are stolen from their owners every year in the United States. In addition, there are more than a thousand suicides each year by younger children and teenagers who get access to firearms. Hundreds more die from accidental discharge. It is likely that many more children sustain serious wounds, or inflict such wounds accidentally on others. In order to limit the chance of such misuse, it is imperative that you keep this weapon locked in a secure place and take other steps necessary to limit the possibility of theft or accident. Failure to take reasonable preventive steps may result in innocent lives being lost, and in some circumstances may result in your liability for these deaths.

IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER-RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER.

AMMUNITION

WARNING

Using the wrong ammunition in your pistol can result in serious bodily injury and damage to your pistol. Make certain the ammunition you load in the magazine is the same caliber as is marked on the pistol.

WARNING - AMMUNITION AND INDUSTRY STANDARDS

Use only clean, dry factory-loaded ammunition. Old, damaged, wet or oily ammunition may fire at pressures higher than industry standard, causing injury to you and bystanders or damage to your pistol.

Do not use reloaded ammunition in your pistol. Its firing pressures are unknown and may well exceed industry standard, causing injury to you and bystanders or damage to your pistol.

Odd sounds are signs of trouble. If a round “does not sound right” when it goes off, stop firing right away. A bullet may be stuck in the barrel. Firing the pistol in this condition may cause pressures higher than industry standard, causing injury to you and bystanders or damage to your pistol.

If you hear any odd sounds when firing your pistol, stop firing, clear the pistol and “field strip” (or disassemble) the pistol in accordance with the procedures listed in this manual. Once the barrel is removed from the slide, look down the bore. If you do not see light, there is something stuck in the bore. Do not fire the pistol again, and take the pistol to a qualified gunsmith or contact the Taurus® Service department at 800-327-3776.

WARNING - LEAD EXPOSURE

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov.

SHOOTING OR CLEANING GUNS MAY EXPOSE YOU TO LEAD

WARNING

“+P” ammunition can be dangerous. There is a detailed discussion about “+P” and “+P+” ammunition on page 20 of this manual. Until you have read that information, do not fire any ammunition marked “+P” in your pistol.

WARNING

Never fire ammunition marked “+P+” in your pistol. +P+ may not comply with industry standards as to chamber pressures.

WARNING

It is DANGEROUS to fire “+P+” ammunition in any Taurus® firearm, and doing so may result in serious bodily injury or death. The Sporting Arms and Ammunition Manufacturers Institute (SAAMI) does not recognize any “+P+” ammunition at all. These loads operate at unknown pressures.

There are only four calibers that can carry a “+P” rating from SAAMI. They are 38 Special +P, 9mm Luger +P, 38 Super Automatic and 45 Automatic +P. There are no other SAAMI approved “+P” loads. Any ammunition in any other caliber marked “+P” is not SAAMI compliant, may be dangerous and should not be used.

Only fire SAAMI rated Plus P (“+P”) ammunition in Taurus® models designated by Taurus for +P use as below. **Firing +P ammunition in other Taurus products may be dangerous and can result in serious bodily injury or death.**

- Model 856 small-frame revolver in 38 Special.
- Model 850 small-frame revolver in 38 Special.
- Model 851 small-frame revolver in 38 Special.
- Model 85 Polymer small-frame revolver in 38 Special.
- Model 82 medium-frame revolver in 38 Special.
- Model 817 compact frame (tracker) revolver in 38 Special.
- All firearms chambered in 38 Super Automatic.
- All firearms chambered in 45 Automatic (ACP).
- All firearms chambered in 9mm Luger.

NOTICE

Even if your Taurus® firearm is rated for Plus-P (“+P”) ammunition, such ammunition generates pressures significantly in excess of the pressures associated with standard ammunition. Such pressures may affect the useful life of the firearm or exceed the margin of safety built into many firearms. Unless you need +P ammunition, do not use it, particularly for practice.

FIREARMS ARE NOT ALL ALIKE

Many makes and models of firearms might LOOK nearly the same. However, they differ widely in design, operation, and in the location and function of various controls. You may access the Taurus® website at TaurusUSA.com to view and print manuals.

“JAMS”

SOMETIMES A CARTRIDGE OR SHELL CASE MAY BECOME “JAMMED” OR STUCK IN THE PISTOL. TO CLEAR THE JAM, (1) POINT THE MUZZLE IN A SAFE DIRECTION, (2) KEEP YOUR FINGER OFF THE TRIGGER AND ON THE INDEXING PAD/(RMP), (3) REMOVE THE MAGAZINE, THEN (4) PULL BACK THE SLIDE AND LOCK IT TO THE REAR. THE JAMMED CARTRIDGE OR CASE CAN NOW BE REMOVED BY SHAKING OR PICKING IT OUT.

 WARNING - FIRING

The slide opens and shuts quickly while firing. Keep your face and hands away from the rear of slide. Hot brass is ejected quickly and can burn you. Always wear shooting glasses, hat with brim, and hearing protection.

 WARNING - ANY GUN MAY FIRE IF DROPPED

If dropped or struck, the pistol may fire.

 WARNING

If dropped or struck the firearm should be inspected by a trained armorer/gunsmith for a complete function check. After the firearm was dropped or struck, mechanisms, including automatic safeties, may not function as intended resulting in accidental death or serious injury.

OPERATING INSTRUCTIONS

NOTICE

The Taurus GX2 has a striker firing mechanism that operates as a conventional single action system. In other words, each time the slide cycles the striker is cocked.



1. To remove the magazine, press the **magazine release button**, located near the **trigger guard**, with your thumb.




2. To load the **magazine**, hold the bottom of the **magazine** with one of your hands and with the other hand insert the cartridges one at a time, pressing them down and to the rear. Insert the **magazine** into the pistol until it is held by the **magazine catch**. If the **magazine** is not correctly inserted into the pistol, it can fall out when you intend to shoot.



3. Hold the pistol with one hand keeping your finger away from the trigger and on the **Indexing pad/(RMP)**. With the other hand, pull the **slide** to its rear limit and release it, the **slide** will go forward under **recoil spring** pressure and will insert one cartridge into the **chamber**.



4. The pistol is now ready-to-fire by pressing the **trigger**. After firing, the **slide** will recoil from gas pressure, ejecting the empty case and feeding another cartridge into the **chamber** from the **magazine**. The pistol is now ready to fire again.

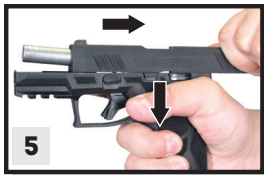

5. After the last round, the **slide** will remain in the open position held by the **slide catch**. To return the slide to its rest position, press the **slide catch** downward just above the **left grip** or pull the **slide** to the rear and release it (you must remove the empty **magazine** first).



WARNING - FIRING

The slide opens and shuts quickly while firing. Keep your face and hands away from the rear of slide. Hot brass is ejected quickly and can burn you. Always wear shooting glasses, hat with brim, and hearing protection.



WARNING - ANY GUN MAY FIRE IF DROPPED

If dropped or struck, the pistol may fire.

LOADED CHAMBER INDICATOR

Never rely upon any safety or mechanical device. Always keep your finger off the trigger and point the muzzle in a safe direction. Your pistol is equipped with a mechanical loaded chamber indicator to assist you in determining the presence of a live cartridge in the chamber, and to comply with state specific laws. The indicator appears on top of the slide.

When the chamber is empty, the loaded chamber indicator should be flush with the top of the slide.



When the chamber is loaded with a live cartridge, the forward portion of the chamber indicator should protrude from the top of the slide. It is both visible and tactile.

MAGAZINE DISCONNECT

This firearm is equipped with a magazine disconnect. This device prevents firing if the magazine is removed from the pistol. Never rely on this device. Always keep your finger off the trigger and the firearm pointed in a safe direction.

DISASSEMBLY

WARNING

Always wear eye protection that is specified for use with firearms (ANSI Z87.1+) every time you handle your firearm for cleaning and maintenance.



1. Before disassembly, always (1) keep your finger off the **trigger** and on the **Indexing pad/(RMP)**, (2) point the **muzzle** in a safe direction, (3) remove the **magazine** by pressing the **magazine release button**, (4) clear the **chamber** and make sure it is empty, and (5) look and feel the **magazine well** and **chamber** to confirm the pistol is empty. An empty firearm cannot fire.




WARNING

After removing the magazine, always check the chamber and make sure it is empty.

2. On the left side of the pistol is the **take down lever** (see page 12), rotate the lever down clockwise to unlock the **slide** from the **grip**.




3. Insert an empty magazine. While pointing the empty pistol in a safe direction, pull the **trigger** and push the **slide** forward away from the **grip** to separate it from the **slide**.

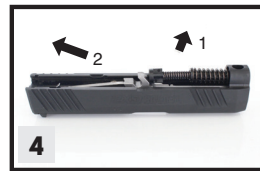

4. Release the **recoil spring assembly** from its position on the bottom of the **barrel**.

WARNING

Take care to prevent the forcible ejection of the recoil spring assembly as the spring is compressed.

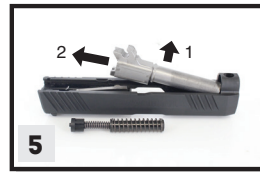

5. Remove the **barrel** from the **slide** by pulling it to the front and up.

MAGAZINE DISASSEMBLY



WARNING

Take care to prevent the forcible ejection of the magazine spring plate and compressed magazine spring.



WARNING

Always wear eye protection that is specified for use with firearms (ANSI Z87.1+) every time you handle your firearm for cleaning and maintenance.



1. Use a **punch** to press in on **magazine spring seat/clip** as shown in figure 1.
2. Slide the **magazine floor plate** toward the front of the magazine as shown in figure 2.
3. Withdraw the **magazine spring plate** and **magazine spring** from **magazine body**. Turn the magazine upside down and remove the magazine follower.



WARNING


No further disassembly is recommended unless done by a qualified gunsmith.

ASSEMBLY

In order to reassemble the pistol, proceed by reversing the disassembly procedure and observe the following details:



1. Place the **barrel** in the **slide** and push it to the rearward position.

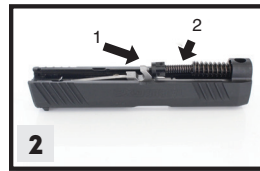

2. Insert the **recoil spring** assembly into the **slide** over the **barrel**, compressing the **spring** slightly to get it into position.



3. The **slide** should be mounted on the **frame** and pulled fully to the rear. Engage the **slide catch**. Rotate the **take down lever** back to its horizontal position. Release the **slide** by pulling down on the **slide catch**.



4. With the **magazine** removed, you should cycle the **slide** several times to insure that the **barrel / slide / frame** fit together properly.

CARE AND MAINTENANCE

The firearm may be cleaned and lubricated under normal conditions with the disassembly steps described in pages 26-27. We recommend you clean and lubricate your firearm at least every 200 rounds for optimal performance. At the same time, check for any loose screws or pins. Tighten the screws and press pins back in as needed.

To keep a firearm safe and in good working condition, it must be kept clean and covered with a light film of good quality gun oil to prevent corrosion. The barrel bore should be cleaned and left free of debris. Follow these steps:

- Remove excessive firing residue from the bore and chamber using a properly fitted brass brush dipped in a gun cleaning solvent. Finish the bore cleaning process by running a dry cotton cloth patch through the bore to remove remaining residue and solvent.
- Clean the exterior of the firearm, slide and rails using a non abrasive cleaning cloth. Remove dust and residue from small crevices using a small brush.
- Lubricate the frame rails and barrel lockup points.
- After cleaning, rub the pistol with a lightly oiled cloth.

Please note that a firearm with laser should not be cleaned in a well or supersonic machine that submerges the firearm, as this process can damage the laser system.




WARNING

Before cleaning, (1) point the muzzle in a safe direction, (2) keep your finger off the trigger and on the indexing pad/(RMP), (3) remove the magazine, then (4) pull back the slide and lock it to the rear, (5) look and feel the magazine well and chamber to confirm the pistol is empty. Never attempt to clean a loaded firearm.

Intentionally left blank

EXPLODED VIEW

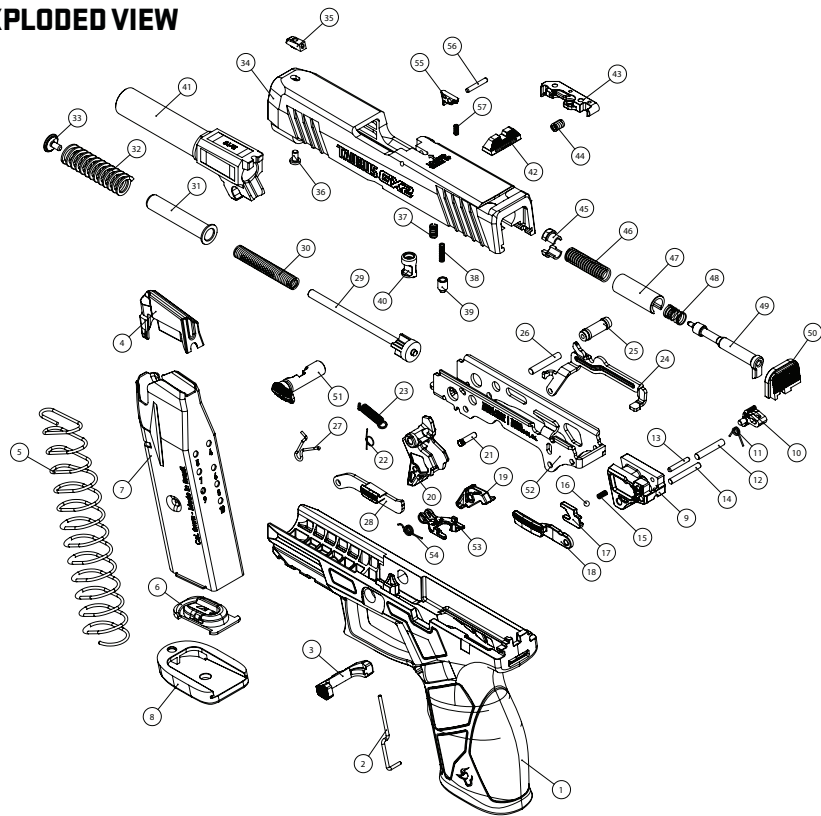

PART LIST

- | | | | |
|----|------------------------------|----|---------------------------------|
| 1 | GRIP | 36 | FRONT SIGHT SCREW |
| 2 | MAGAZINE RELEASE SPRING | 37 | FIRING PIN BLOCK SPRING |
| 3 | MAGAZINE RELEASE | 38 | EXTRACTOR PIN SPRING |
| 4 | FOLLOWER | 39 | EXTRACTOR PIN |
| 5 | MAGAZINE SPRING | 40 | FIRING PIN BLOCK |
| 6 | MAGAZINE SPRING PLATE | 41 | BARREL |
| 7 | MAGAZINE BODY (10 ROUNDS) | 42 | REAR SIGHT |
| 8 | MAGAZINE BOTTOM | 43 | EXTRACTOR |
| 9 | REAR SUPPORT | 44 | EXTRACTOR SPRING |
| 10 | SEAR | 45 | FIRING PIN BUSHING |
| 11 | SEAR SPRING | 46 | FIRING PIN SPRING |
| 12 | REAR SUPPORT PIN 3MM | 47 | FIRING PIN SLEEVE |
| 13 | SEAR PIN | 48 | FIRING PIN RETURN SPRING |
| 14 | REAR SUPPORT PIN 2.5MM | 49 | FIRING PIN |
| 15 | MANUAL SAFETY SPRING | 50 | SLIDE CAP |
| 16 | MANUAL SAFETY SPHERE | 51 | DISASSEMBLY LATCH |
| 17 | SEAR LOCK | 52 | FRAME |
| 18 | MANUAL SAFETY | 53 | MAGAZINE DISCONNECT |
| 19 | TRIGGER SAFETY | 54 | MAGAZINE DISCONNECT SPRING |
| 20 | TRIGGER | 55 | LOADED CHAMBER INDICATOR |
| 21 | TRIGGER SAFETY PIN | 56 | LOADED CHAMBER INDICATOR PIN |
| 22 | TRIGGER SAFETY SPRING | 57 | LOADED CHAMBER INDICATOR SPRING |
| 23 | TRIGGER SPRING | | |
| 24 | TRIGGER BAR | | |
| 25 | BARREL DISCONNECTOR AXIS | | |
| 26 | TRIGGER PIN | | |
| 27 | SLIDE CATCH SPRING | | |
| 28 | SLIDE CATCH | | |
| 29 | INTERNAL RECOIL SPRING GUIDE | | |
| 30 | INTERNAL RECOIL SPRING | | |
| 31 | EXTERNAL RECOIL SPRING GUIDE | | |
| 32 | EXTERNAL RECOIL SPRING | | |
| 33 | ASSEMBLY RECOIL SPRING SCREW | | |
| 34 | SLIDE | | |
| 35 | FRONT SIGHT | | |

TAURUS SERVICE

Should your firearm require adjustment or repair, contact our Customer Care department at 800-327-3776.

Please follow these suggestions to expedite service in the United States to return any firearm to us for adjustment or repair.

1. Federal law permits you to return your firearm to the manufacturer for service via common carriers. However, state and local firearms laws vary greatly; you should consult your local prosecuting attorney regarding any restrictive laws in your jurisdiction regarding your shipment or receipt of firearms. With the above in mind, it is strongly recommended that any firearm sent to us for repair be sent through a federally licensed dealer.

2. All firearms must be shipped to us prepaid. WE WILL NOT ACCEPT COLLECT SHIPMENTS.

3. Warranty Service: If your product is covered under the Taurus® Limited Lifetime Warranty (<https://warranty.taurususa.com>) or was manufactured prior to January 1, 2017, you must contact Taurus to receive warranty service. You may contact Taurus by calling 800-327-3776, logging onto <https://taurususa.com>, or in writing: Taurus, Attn: Warranty Service, 100 Taurus Way, Bainbridge, GA 39817. Please include a description of the claimed issue, along with your name, address, telephone number, model and serial number of your firearm, proof of purchase, and date of purchase.

4. FIREARMS MUST BE SHIPPED UNLOADED. Double check the chamber of your firearm before shipping. If firearms are sent to Taurus in a loaded condition, we are required by law to notify the Federal authorities.

5. DO NOT include telescopic sights, custom grips, holsters, or other accessories with any firearm shipped to us.

PARTS

Firearms require periodic maintenance, inspection, adjustment and repair. If your pistol has a malfunction, be safe. Stop firing, “clear” and unload the pistol and take it to a qualified gunsmith. Before shooting it again, contact our Customer Care department if you have any questions.

If water, sand, or other foreign matter gets in your pistol, field strip it (see pages 26-27) and thoroughly clean it. Failure to keep your firearm clean and in proper working order can be dangerous.

Our Customer Care department maintains a full stock of replacement parts for current Taurus firearms. Even though most gunsmiths have the knowledge, training and ability to make the necessary repairs to your firearm, the skill and workmanship of any particular gunsmith is totally beyond our control. Should your firearm require service, return it to our Customer Care department.

Remember, unauthorized adjustments or parts replacement will void your warranty. If you choose to have someone else do the required work, the purchaser and/or installer of parts must accept full responsibility for the correct adjustment and function of the firearm.



TAURUS® LIMITED LIFETIME WARRANTY

Taurus® hereby provides the following **LIMITED LIFETIME WARRANTY** to the original purchaser of the enclosed Taurus firearm subject to the terms and conditions set forth below. **THIS IS THE ONLY WARRANTY EXTENDED BY TAURUS COVERING THIS FIREARM.**

What does the warranty cover and what is its duration?

Taurus warrants to the original purchaser that the enclosed firearm was made free of defects in material, function, and workmanship. Taurus promises to remedy any defect in material, function or workmanship for the entire time that the original purchaser owns the firearm. This warranty covers the firearm's finish, grips, magazines, sights or accessories for the first year. Any claims of defect related to lasers must be directed to the manufacturer of the laser. This warranty terminates automatically upon the transfer of this firearm to any individual or entity other than the original purchaser.

Disclaimer and Limitation of Remedy.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY IMPARTED BY STATE LAW WILL BE LIMITED TO ONE (1) YEAR.

Some States do not allow limitations on how long an implied warranty lasts, so the above-limitation may not apply to you.

ANY AND ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXPRESSLY DISCLAIMED UNDER ALL CIRCUMSTANCES.

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This **LIMITED LIFETIME WARRANTY** gives you specific legal rights, and you may also have other rights which vary from State to State.

Taurus will not be responsible for:

1. Defects or malfunctions resulting from careless handling, unauthorized adjustments or modifications.
2. Use of defective or improper ammunition, reloaded ammunition, corrosion, neglect, abuse, ordinary wear and tear or unreasonable use.
3. Criminal misuse, negligence or use under the influence of drugs or alcohol.

How do you obtain warranty service?

The warranty becomes effective only if activated by the original purchaser within thirty (30) days of the purchase date by registering online at: <https://warranty.taurususa.com> or by calling Taurus at 800-327-3776.

You must contact Taurus to receive warranty service. You may contact Taurus by calling 800-327-3776, logging onto <https://taurususa.com>, or in writing: Taurus, Attn: Warranty Service, 100 Taurus Way, Bainbridge, GA 39817. Please include a description of the claimed issue, along with your name, address, telephone number, model and serial number of your firearm, proof of purchase, and date of purchase.

NOTES

IMPORTANT DO NOT DISCARD

**KEEP THIS MANUAL WITH THE FIREARM
UPON CHANGE OF OWNERSHIP.**

TAURUS ARMAS S.A.

Av. São Borja, 2181 – Prédio A
São Leopoldo/Fazenda São Borja
Rio Grande do Sul
93.035-411
Brasil

TAURUS INTERNATIONAL MANUFACTURING, INC.

100 Taurus Way
Bainbridge, GA 39817
Telephone: 1-800-327-3776

TAURUSUSA.COM

045-0056-00

